 
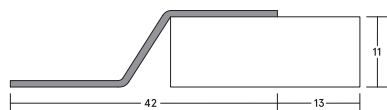 


LAS7030, LAS7040 PERIMETER SEAL FITTING GUIDE

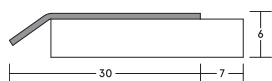

LENGTH _____

CONTENTS

- LAS7030 or LAS7040 perimeter seal
- Bag of screws

TOOLS REQUIRED

- Tape measure
- Saw, power or hand
- Screw driver, power or hand
- Knife
- Pencil or marker

NOTE

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

For more information please call:

+9714 883 7206

NOTE

It is not necessary to remove the door from its hinges, unless otherwise specified.

STEP 1

If using in conjunction with face-fixed threshold seals, the perimeter seal must be fitted to the door frame first. The stainless section must not project beyond the face of the door stop.

STEP 2

Measure head (top) and jambs (sides) stops of the door and cut lengths to suit using sharp knife for seal and machine tool / hacksaw for stainless section. Unless otherwise specified the seals may be butt-jointed at corners.

STEP 3

Lightly screw fix each length to head and jambs, using screws supplied (fixing holes are pre-drilled and slotted to enable the seal to be accurately fitted and adjusted as required.)

STEP 4

Close door and insert this sheet of paper between seal and door face to check uniform seal around door. Only minimum pressure is required to achieve seal.

NOTE

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.



LAS7030



LAS7040

V1